

AIX Levels for S814, S824, S822

	11/12	2/12	3/13	5/13	8/13	9/13	10/13	12/13	4/14	6/14	3Q/14	4Q/14	1Q/15	2Q15
AIX 6 TL7	SP6		SP7			SP8		SP9			SP10			
AIX 6 TL8	SP1	SP2				SP3		SP4			SP5		SP6	
AIX 6 TL9							SP1		SP2	SP3		SP4		SP5
AIX7 TL1	SP6			SP7	SP8			SP9			SP10			
AIX 7 TL2	SP1	SP2			SP3			SP4			SP5		SP6	
AIX 7 TL3							SP1		SP2	SP3		SP4		SP5

P7 or P6 Modes with Virtual I/O
P7 or P6 Modes with Full I/O Support
P8, P7 or P6 Modes with Full I/O Support

AIX Levels for E870, E880

	11/12	2/12	3/13	5/13	8/13	9/13	10/13	12/13	4/14	6/14	3Q/14	4Q/14	1Q/15	2Q15
AIX 6 TL8	SP1	SP2				SP3		SP4			SP5		SP6	
AIX 6 TL9							SP1		SP2	SP3		SP4		SP5
AIX 7 TL2	SP1	SP2			SP3			SP4			SP5		SP6	
AIX 7 TL3							SP1		SP2	SP3*		SP4*		SP5

P7 or P6 Modes with Virtual I/O
P7 or P6 Modes with Full I/O Support
P8, P7 or P6 Modes with Full I/O Support

* APAR required for E880 in addition to SP. See system sales manual for exact AIX requisite

AIX Levels for E850

	11/12	2/12	3/13	5/13	8/13	9/13	10/13	12/13	4/14	6/14	3Q/14	4Q/14	1Q/15	2Q15
AIX 6 TL8	SP1	SP2				SP3		SP4			SP5		SP6	
AIX 6 TL9							SP1		SP2	SP3		SP4		SP5
AIX 7 TL2	SP1	SP2			SP3			SP4			SP5		SP6	
AIX 7 TL3							SP1		SP2	SP3		SP4		SP5

P7 or P6 Modes with Virtual I/O
P7 or P6 Modes with Full I/O Support
P8, P7 or P6 Modes with Full I/O Support